

Wanduhr

08146



DE

Gebrauchsanleitung

EN

Operating instructions

DE

Gebrauchsanleitung

Liebe Kundin, lieber Kunde,

wir freuen uns, dass du dich für diese Wanduhr mit Vogelstimmen entschieden hast. Lies vor dem ersten Gebrauch des Produktes diese Gebrauchsanleitung sorgfältig durch und bewahre sie für spätere Fragen und weitere Nutzer auf. Sie ist ein Bestandteil des Produktes.

Solltest du Fragen haben, kontaktiere den Kundenservice über unsere Website: www.ds-group.de/kundenservice

Symbole



Gefahrenzeichen: Die dazugehörenden Sicherheitshinweise aufmerksam lesen und befolgen.



Gebrauchsanleitung lesen.  Gleichstrom

Bestimmungsgemäßer Gebrauch

- Dieses Produkt ist eine Wanduhr, aus der zur vollen Stunde eine Vogelstimme ertönt und die im Dunkeln leuchtet. Das Produkt ist kein Spielzeug!
- Das Produkt ist für den privaten Gebrauch, nicht für eine gewerbliche Nutzung konzipiert. Das Produkt nur wie in der Gebrauchsanleitung beschrieben nutzen. Jede weitere Verwendung gilt als bestimmungswidrig.



SICHERHEITSHINWEISE

- Verpackungsmaterial von Kindern und Tieren fernhalten. Es besteht Erstickungsgefahr!
- Batterien können bei Verschlucken lebensgefährlich sein. Batterien und Produkt für Kleinkinder und Tiere unerreichbar aufbewahren. Wurde eine Batterie verschluckt, muss sofort medizinische Hilfe in Anspruch genommen werden. Es besteht Verätzungsgefahr durch Batteriesäure.
- Sollte eine Batterie auslaufen, den Kontakt von Haut, Augen und Schleimhäuten mit der Batteriesäure vermeiden. Bei Kontakt mit Batteriesäure die betroffenen Stellen sofort mit reichlich klarem Wasser spülen und umgehend medizinische Hilfe in Anspruch nehmen. Es besteht Verätzungsgefahr durch Batteriesäure.
- Nur den in den technischen Daten angegebenen Batterietyp verwenden.


- Die Batterien aus dem Produkt herausnehmen, wenn diese verbraucht sind oder das Produkt längere Zeit nicht benutzt wird. So werden Schäden durch Auslaufen vermieden.
- Eine ausgelaufene Batterie sofort aus dem Produkt nehmen.
- Das Produkt an einer sicheren Stelle auf einem trockenen Untergrund, in ausreichendem Abstand zu Wärmequellen wie z. B. Öfen und Heizungen anbringen. Zum Aufhängen für die Beschaffenheit der Wand geeignetes Befestigungsmaterial verwenden.
- Das Produkt vor Hitze, off enem Feuer, direktem Sonnenlicht, Minustemperaturen, lang anhaltender Feuchtigkeit, Nässe und Stößen schützen.
- Keine Veränderungen am Produkt vornehmen. Nicht versuchen, es eigenständig zu reparieren oder Teile zu ersetzen. In Schadensfällen den Kundenservice kontaktieren.
- Keine ätzenden oder scheuernden Reinigungsmittel verwenden. Diese können die Oberfläche beschädigen. Das Produkt bei Bedarf mit einem weichen, trockenen Tuch abstauben. Stärkere Verschmutzungen können mit einem angefeuchteten Tuch abgewischt werden.

Lieferumfang

1 x Wanduhr, 1 x Gebrauchsanleitung

Das Produkt auf Transportschäden überprüfen. Bei Transportschäden den Kundenservice kontaktieren. **Niemals das Typenschild und eventuelle Warnhinweise entfernen!**

Produktrückseite

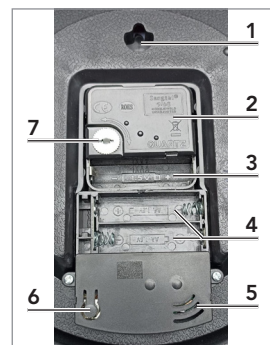

- Aufhängeöse
- Uhrwerk
- Batteriefach Uhrwerk
- Batteriefach Lautsprecher
- Lautsprecher
- Taste zum Abspielen der Vogelstimmen (unabhängig von der Uhrzeit)
- Einstellrad

Inbetriebnahme

Für den Betrieb sind drei 1,5 V-Batterien des Typs AA nötig. Diese sind nicht im Lieferumfang enthalten.

Weiterhin wird ein Nagel oder anderes Befestigungsmaterial zum Aufhängen der Uhr benötigt.

In der Zeit zwischen 6 Uhr morgens und 21 Uhr abends erklingt zu jeder vollen Stunde die entsprechende Vogelstimme. In der Nacht sind die Vogelstimmen deaktiviert. Damit die Vogelstimmen auch zu den vorgesehenen Zeiten ertönen, sind die nachfolgenden Schritte in der angegebenen Reihenfolge auszuführen:

- Prüfen, ob die Kontakte in den Batteriefächern (3, 4) und an den Batterien sauber sind, und ggf. reinigen.
- Mit dem Einstellrad (7) die Zeiger der Uhr auf 5:45 Uhr stellen.
- Zwei 1,5V-Batterien, Typ AA, in das Batteriefach des Lautsprechers (4) einlegen. Dabei auf die Polarität (+ / -) achten.
- Eine 1,5V-Batterie, Typ AA, in das Batteriefach des Uhrwerks (3) einlegen. Dabei auf die Polarität (+ / -) achten.
- Mit dem Einstellrad die aktuelle Uhrzeit einstellen. Die Zeiger dabei im Uhrzeigersinn drehen.
BEACHTEN: Die Uhr zählt im 24-Stunden-Modus und fängt bei 6:00 Uhr morgens an. Wenn eine Uhrzeit nach 12:00 Uhr mittags eingestellt wird, muss der kleine Zeiger beim Einstellen 12:00 Uhr passieren.

Sollte nicht die korrekte Vogelstimme ertönen, wiederhole die Schritte 2 bis 5.

Wenn die Leistung des Produktes nachlässt, die Batterien ersetzen.

Technische Daten

Artikelnummer: 08146

Modellnummer: BG-F-01989

Spannung:

- Uhr: 1,5V DC (1 x 1,5 V-Batterie, AA)
- Lautsprecher: 3V DC (2 x 1,5 V-Batterie, AA)

ID Gebrauchsanleitung: Z 08146 M DS V2 0724 as

Entsorgung



Das Verpackungsmaterial umweltgerecht entsorgen und der Wertstoffsammlung zuführen.



Das nebenstehende Symbol (durchgestrichene Mülltonne mit Unterstrich) bedeutet, dass Altgeräte nicht in den Hausmüll, sondern in spezielle Sammel- und Rückgabesysteme gehören.

Besitzer von Altgeräten haben Altbatterien und Altkumulatoren, die nicht vom Altgerät umschlossen sind und zerstörungsfrei entnommen werden können, aus dem Altgerät zu entnehmen und separat zu entsorgen (siehe auch Abschnitt zur Batterieentsorgung). Besitzer von Altgeräten aus privaten Haushalten können diese bei den Sammelstellen der öffentlich-rechtlichen Entsorgungsträger oder bei den von Herstellern und Vertreibern im Sinne des ElektroG eingerichteten Rücknahmestellen unentgeltlich abgeben, damit sie einer umweltschonenden Entsorgung sowie einer Wiedergewinnung von wertvollen Rohstoffen zugeführt werden können. Bei einer unsachgemäßen Entsorgung können giftige Inhaltsstoffe in die Umwelt gelangen, die gesundheitsschädigende Wirkungen auf Menschen, Tiere und Pflanzen haben. Rücknahmepflichtig sind auch Geschäfte, die Elektro- und Elektronikgeräte auf dem Markt bereitstellen.



Batterien und Akkus dürfen nicht zusammen mit dem Hausmüll entsorgt werden. Verbraucher sind gesetzlich dazu verpflichtet, Batterien und Akkus einer getrennten Sammlung zuzuführen. Batterien und Akkus können unentgeltlich bei einer Sammelstelle der Gemeinde/ des Stadtteils oder im Handel abgegeben werden, damit sie einer umweltschonenden Entsorgung sowie einer Wiedergewinnung von wertvollen Rohstoffen zugeführt werden können. Bei einer unsachgemäßen Entsorgung können giftige Inhaltsstoffe in die Umwelt gelangen, die gesundheitsschädigende Wirkungen auf Menschen, Tiere und Pflanzen haben. Batterien und Akkus nur in entladendem Zustand abgeben. Wenn möglich wiederaufladbare Batterien anstelle von Einwegbatterien verwenden. Bei lithiumhaltigen Batterien und Akkus vor der Entsorgung die Pole abkleben, um einen Kurzschluss zu vermeiden. Ein Kurzschluss kann zu einem Brand oder einer Explosion führen.

Die Abfallvermeidung leistet einen noch wertvolleren Beitrag zum Umweltschutz. Sofern möglich, ist daher neben einer weiteren eigenen Nutzung oder Reparatur auch die Abgabe an Zweitnutzer eine ökologisch wertvolle Alternative zur Entsorgung.

Alle Rechte vorbehalten.



EN Operating instructions

Dear Customer,

We are delighted that you have chosen this **wall clock with bird songs**. Before using the product for the first time, please read through these operating instructions carefully and keep them for future reference and other users. They form an integral part of the product.

If you have any questions, contact the customer service department via our website: **www.ds-group.de/kundenservice**

Symbols



Danger symbols: Read through the associated safety notices carefully and follow them.



Read the operating instructions.



Direct current

Intended Use

- This product is a wall clock that glows in the dark from which a bird song will sound on the hour. The product is **not** a toy!
- The product is designed for personal use only and is not intended for commercial applications. The product should only be used as described in these operating instructions. Any other use is deemed to be improper.



SAFETY INSTRUCTIONS

- Keep the packaging material away from children and animals. There is a danger of suffocation.
- Batteries can be deadly if swallowed. Keep batteries and the article out of the reach of small children and animals. If a battery is swallowed, immediate medical attention must be sought. There is a danger of burns from battery acid.
- If a battery leaks, do not allow your skin, eyes and mucous membranes to come into contact with the battery acid. If you touch battery acid, rinse the affected area with abundant fresh water immediately and seek medical attention soon as possible. There is a danger of burns from battery acid.

- Use only the battery type specified in the Technical Data.
- Take the batteries out of the product when they are dead or if the product is not going to be used for a prolonged period. This will prevent any damage if a battery leaks.
- Remove dead batteries immediately.
- Install the product at a safe place on a dry surface, a sufficient distance away from heat sources, for example ovens and heating systems. Use fastening material that is suitable for the composition of the wall to hang up the product.
- Protect the product from: impacts, heat, direct sunlight, sub-zero temperatures, moisture and wet conditions.
- Do not make any changes to the product and do not attempt to repair it. In the event of any damage, please contact our customer service department.
- Do not use any corrosive or abrasive cleaning agents. These can damage the surface. Dust off the article if necessary using a soft, dry cloth. More intense soiling can be wiped off with a damp cloth.


Items Supplied

1 x wall clock, 1 x operating instructions

Check the product for any transport damage. In the event of transport damage, please contact our customer service department.

Remove any possible films, stickers or transport protection from the product. **Never remove the rating plate and any possible warnings!**

Back Side of the Product

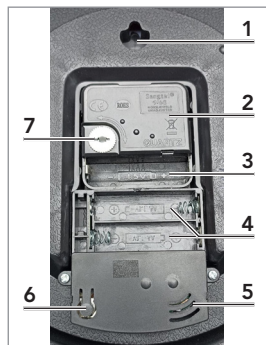

- 1 Suspension eye
- 2 Cockwork
- 3 Cockwork battery compartment
- 4 Loudspeaker battery compartment
- 5 Loudspeaker
- 6 Button for playing the bird songs (regardless of the time)
- 7 Adjustment wheel

Start-up

Three 1.5 V batteries of the AA type are required for operation. They are not supplied with the product.

Furthermore, a nail or other fastening material for hanging the clock is needed.

From 6 a.m. to 9 p.m., the corresponding bird song will sound on the hour. The bird songs are, however, deactivated during the night. To ensure that the bird songs will sound at the designated times, carry out the following steps in the order indicated:

1. Check whether the contacts in the battery compartments (3, 4) and on the batteries are clean, and clean them if necessary.
 2. Set the clock's hour and minute hands to 5:45 using the adjustment wheel (7).
 3. Insert two 1.5V batteries, AA type, into the loudspeaker battery compartment (4). Ensure the correct polarity (+ / -).
 4. Insert one 1.5V battery, AA, type into the cockwork battery compartment (3). Ensure the correct polarity (+ / -).
 5. Set the current time with the adjustment wheel. In the process, move the hour and minute hands clockwise.
- NOTE:** The clock operates in 24-hour mode and starts at 0:00 a.m. If time after 12:00 p.m. is to be set the small hand must pass 12:00.

If the correct bird song will not sound, repeat steps 2 to 5.

If the performance of the article diminishes, replace the batteries.

Technical Data

Article number:	08146
Model number:	BG-F-01989
Power supply:	
o Clock:	1.5V DC (1x 1.5 V battery, AA)
o Loudspeaker:	3V DC (2x 1.5 V batteries, AA)

Operating instructions ID: Z 08146 M DS V2 0724 as

Disposal



Dispose of the packaging material in an environmentally friendly manner so that it can be recycled.



The adjacent symbol (crossed-out bin underlined) means that used devices should not be disposed of in the domestic waste, but should instead be taken to special collection and return systems. Owners of used devices must remove from the used device any used batteries or rechargeable batteries which are not encapsulated by the used device and can be removed in a non-destructive way and dispose of them separately (see also the section on battery disposal).

Owners of used devices from private households can take them free of charge to the collection points of the public waste disposal authorities or the disposal points which are set up by manufacturers and distributors under the Electrical Equipment Act so that they can be disposed of in an environmentally friendly way and valuable raw materials can be recovered. If they are not disposed of properly, toxic ingredients may escape into the environment and cause harm to the health of humans, animals and plants. Businesses which market electrical and electronic devices are also obliged to take back used devices.



(Rechargeable) batteries must not be disposed of along with the household waste. Consumers are legally obliged to dispose of (rechargeable) batteries separately.

(Rechargeable) batteries can be handed in free of charge at a collection point of the local authority/district or in retailers so that they can be disposed of in an environmentally friendly way and valuable raw materials can be recovered. If they are not disposed of properly, toxic ingredients may escape into the environment and cause harm to the health of humans, animals and plants.

Only dispose of (rechargeable) batteries when they are discharged. If possible, use rechargeable batteries rather than single-use batteries.

In the case of (rechargeable) batteries containing lithium, tape over the poles before you dispose of them to prevent a short circuit. A short circuit may cause a fire or explosion.

Waste prevention makes an even more valuable contribution to protecting the environment. This means if possible, as well as continuing to use or repair, passing it on to another user also represents an ecologically beneficial alternative to disposal.

All rights reserved.

DS Produkte GmbH, Stormarnring 14, 22145 Stapelfeld
Deutschland | Germany

Kundenservice | Customer Service:

Am Heisterbusch 1, 19258 Gallin, Deutschland | Germany
Tel.: +49 38851 314650* | kundenservice@dspro.de

*Anruf in das deutsche Festnetz zum Tarif deines Anbieters.
Calls to German landlines are subject to your provider's charges.