


Verzierstift

11939

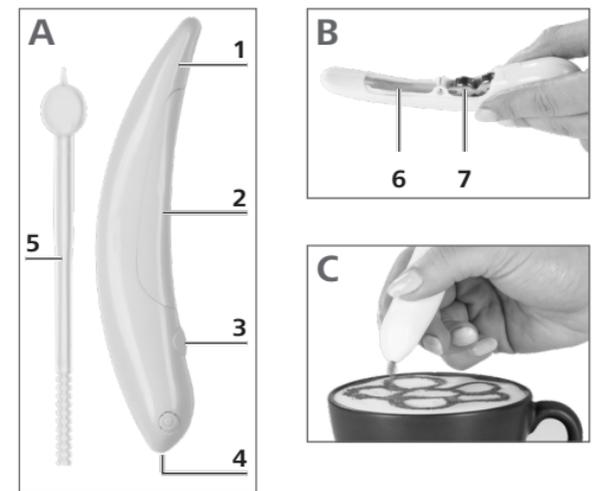

DE Gebrauchsanleitung

Sehr geehrte Kundin, sehr geehrter Kunde,

wir freuen uns, dass Sie sich für den **GOURMETmaxx Verzierstift** entschieden haben. Sollten Sie Fragen zum Produkt sowie zu Ersatz- / Zubehörteilen haben, kontaktieren Sie den Kundenservice über unsere Website:

www.ds-group.de/kundenservice

Informationen zur Gebrauchsanleitung

Lesen Sie vor dem ersten Gebrauch des Produktes diese Gebrauchsanleitung sorgfältig durch und bewahren Sie diese für spätere Fragen und weitere Nutzer auf. Sie ist ein Bestandteil des Produktes. Hersteller und Importeur übernehmen keine Haftung, wenn die Angaben in dieser Gebrauchsanleitung nicht beachtet werden.

SIGNALWÖRTER

Signalwörter bezeichnen Gefährdungen bei Nichtbeachtung der dazugehörigen Hinweise.

WARNUNG – mittleres Risiko, kann schwere Verletzung oder Tod zur Folge haben

HINWEIS – kann Risiko von Sachschäden zur Folge haben

SYMBOLS



Gefahrenzeichen: Dieses Symbol zeigt mögliche Gefahren an. Die dazugehörigen Sicherheitshinweise aufmerksam lesen und befolgen.



Gebrauchsanleitung vor Benutzung lesen!



Für Lebensmittel geeignet.

LIEFERUMFANG

Verzierstift (1 x), Hilfsstäbchen (1 x), 1,5V-Batterie, LR44 (2 x), Gebrauchsanleitung (1 x)

Den Lieferumfang auf Vollständigkeit und die Bestandteile auf Transportschäden überprüfen. Bei Schäden nicht verwenden, sondern den Kundenservice kontaktieren. Eventuelle Folien, Aufkleber oder Transportschutz vom Produkt abnehmen.

Niemals das Typenschild und eventuelle Warnhinweise entfernen!

AUF EINEN BLICK

(Bild A + B)

- | | |
|--------------------|-----------------|
| 1 Verzierstift | 5 Hilfsstäbchen |
| 2 Abdeckung | 6 Pulverkammer |
| 3 Ein- / Aus-Taste | 7 Batteriefach |
| 4 Pulveröffnung | |

BESTIMMUNGSGEMÄSSER GEBRAUCH

- Das Produkt ist zum Verzieren von Speisen und Getränken mit Pulver, wie z. B. Kakao, Zimt oder anderen Gewürzen bestimmt.
- Das Produkt ist für den privaten Gebrauch, nicht für eine gewerbliche Nutzung konzipiert.
- Das Produkt nur für den angegebenen Zweck und nur wie in der Gebrauchsanleitung beschrieben benutzen. Jede weitere Verwendung gilt als bestimmungswidrig.

SICHERHEITSHINWEISE

WARNUNG – Verletzungsgefahr

- Das Verpackungsmaterial und Zubehör von Kindern und Tieren fernhalten. Es besteht Erstickengefahr!
- Kinder dürfen **nicht** mit dem Produkt spielen.
- Batterien können bei Verschlucken lebensgefährlich sein. Deshalb Batterie und Produkt für sehr junge Kinder und Tiere unerschwinglich aufbewahren. Wurde eine Batterie verschluckt, sofort medizinische Hilfe in Anspruch nehmen. Es besteht Verätzungsgefahr durch Batteriesäure.
- Sollte eine Batterie ausgelaufen sein, den Kontakt von Haut, Augen und Schleimhäuten mit der Batteriesäure vermeiden. Gegebenenfalls Schutzhandschuhe tragen. Bei Kontakt mit Batteriesäure die betroffenen Stellen

sofort mit reichlich klarem Wasser spülen und umgehend medizinische Hilfe in Anspruch nehmen. Es besteht Verätzungsgefahr durch Batteriesäure.

HINWEIS – Risiko von Material- und Sachschäden

- Zum Reinigen keine scharfen oder scheuernden Reinigungsmittel oder Reinigungspads verwenden. Diese können die Oberflächen beschädigen. Bei Bedarf lediglich mit einem Tuch oder einer weichen Bürste reinigen.
- Nur den in den Produktdaten angegebenen Batterietyp verwenden.
- Immer alle Batterien ersetzen. Keine verschiedenen Batterietypen, -marken oder Batterien mit unterschiedlicher Kapazität benutzen.
- Batterien aus dem Produkt herausnehmen, wenn diese verbraucht sind oder das Produkt längere Zeit nicht benutzt wird. So werden Schäden durch Auslaufen vermieden.
- Ausgelaufene Batterien sofort entfernen und die Kontakte im Produkt reinigen.
- Keine schweren Gegenstände auf das Produkt legen oder stellen.
- Das Produkt schützen vor: Wärmequellen, Feuer, Minustemperaturen, lang anhaltender Feuchtigkeit, Nässe, direkter Sonneneinstrahlung und Stößen.

- Nur Original-Zubehörteile des Herstellers verwenden, um die Funktionsweise des Produktes nicht zu beeinträchtigen und eventuelle Schäden zu verhindern.

BATTERIEN EINLEGEN / WECHSELN

HINWEIS: Die mitgelieferten Batterien sind bereits in das Batteriefach eingelegt. Vor dem ersten Gebrauch den Kunststoffstreifen zwischen dem Verzierstift und der Abdeckung herausziehen.

- Die Abdeckung abziehen.
 - Vor dem Einlegen prüfen, ob die Kontakte im Produkt und an den Batterien sauber sind, und ggf. reinigen.
 - Zwei 1,5V-Batterien (LR44) in das Batteriefach einlegen. Dabei auf die Polarität (+/-) achten.
 - Die Abdeckung aufsetzen und festdrücken. Sie muss einrasten.
- Bei nachlassender Leistung des Produktes die Batterien ersetzen.

PULVERKAMMER BEFÜLLEN

- Die Abdeckung abziehen.
- Kakao, Zimt o. Ä. in die Pulverkammer füllen. Nicht überfüllen!
- Die Abdeckung aufsetzen und festdrücken. Sie muss einrasten.

BENUTZUNG

Beachten!

- Das Produkt kann mit möglichen Produktionsrückständen behaftet sein. Daher vor dem ersten Gebrauch gründlich reinigen.

- Lebensmittel / Getränke verzieren:** Den Verzierstift mit der Pulveröffnung mit etwas Abstand über die zu verzierende Oberfläche führen. Gleichzeitig die Ein- / Aus-Taste drücken und halten. Solange die Taste gedrückt wird, rieselt Pulver aus der Pulveröffnung (**Bild C**).
- Pulveröffnung verschließen:** Die Ein- / Aus-Taste loslassen. **HINWEIS:** Nach dem Loslassen der Taste kann noch etwas Pulver aus der Pulveröffnung rieseln. Dies ist normal und kein Defekt des Produktes.
- Verstopfung lösen:** Das Hilfsstäbchen vorsichtig in die Pulveröffnung schieben und wieder herausziehen. Ggf. vorsichtig gegen den Verzierstift klopfen oder kurz die Ein- / Aus-Taste drücken.
- Das Produkt bei Nichtgebrauch vor Staub und direktem Sonnenlicht geschützt, kühl und trocken außerhalb der Reichweite von Kindern und Tieren lagern.

ENTSORGUNG



Das Verpackungsmaterial umweltgerecht entsorgen und der Wertstoffsammlung zuführen.



Das nebenstehende Symbol (durchgestrichene Mülltonne mit Unterstrich) bedeutet, dass Altgeräte nicht in den Hausmüll, sondern in spezielle Sammel- und Rückgabesysteme gehören. Besitzer von Altgeräten haben Altbatterien und Altakkumulatoren, die nicht vom Altgerät umschlossen sind und zerstörungsfrei entnommen werden können, aus dem Altgerät zu entnehmen und separat zu entsorgen (siehe auch Abschnitt zur Batterieentsorgung). Besitzer von Altgeräten aus privaten Haushalten können diese bei den Sammelstellen der öffentlich-rechtlichen Entsorgungsträger oder bei den von Herstellern und Vertriebern im Sinne des ElektroG eingerichteten Rücknahmestellen unentgeltlich abgeben, damit sie einer umweltschonenden Entsorgung sowie einer Wiedergewinnung von wertvollen Rohstoffen zugeführt werden können. Bei einer unsachgemäßen Entsorgung können giftige Inhaltsstoffe in die Umwelt gelangen, die gesundheitsschädigende Wirkungen auf Menschen, Tiere und Pflanzen haben. Rücknahmepflichtig sind auch Geschäfte, die Elektro- und Elektronikgeräte auf dem Markt bereitstellen.



Batterien und Akkus dürfen nicht zusammen mit dem Hausmüll entsorgt werden. Verbraucher sind gesetzlich dazu verpflichtet, Batterien und Akkus einer getrennten Sammlung zuzuführen. Batterien und Akkus können unentgeltlich bei einer Sammelstelle der Gemeinde / des Stadtteils oder im Handel abgegeben werden, damit sie einer umweltschonenden Entsorgung sowie einer Wiedergewinnung von wertvollen Rohstoffen zugeführt werden können. Bei einer unsachgemäßen Entsorgung können giftige Inhaltsstoffe in die Umwelt gelangen, die gesundheitsschädigende Wirkungen auf Menschen, Tiere und Pflanzen haben. Batterien und Akkus nur in entladenerem Zustand abgeben. Wenn möglich wiederaufladbare Batterien anstelle von Einwegbatterien verwenden. Bei lithiumhaltigen Batterien und Akkus vor der Entsorgung die Pole abkleben, um einen Kurzschluss zu vermeiden. Ein Kurzschluss kann zu einem Brand oder einer Explosion führen.

Die Abfallvermeidung leistet einen noch wertvolleren Beitrag zum Umweltschutz. Sofern möglich, ist daher neben einer weiteren eigenen Nutzung oder Reparatur auch die Abgabe an Zweitnutzer eine ökologisch wertvolle Alternative zur Entsorgung.

TECHNISCHE DATEN

Artikelnummer: 11939
Modellnummer: WR2022121601
Spannungsversorgung: 3 V DC (2 x 1,5 V-Batterie, LR44)
ID Gebrauchsanleitung: Z 11939 M DS V1 0323 as



Alle Rechte vorbehalten.

Importeur:
DS Produkte GmbH, Stormarnring 14,
22145 Stapelfeld, Deutschland

Kundenservice:
Am Heisterbusch 1, 19258 Gallin, Deutschland
☎ +49 38851 314650 *)

*) Anruf in das deutsche Festnetz zum Tarif Ihres Anbieters.

EN Operating instructions

Dear Customer,

We are delighted that you have chosen the **GOURMETmaxx decorating pen**. If you have any questions about the product and about spare parts/accessories, contact the customer service department via our website:

www.ds-group.de/kundenservice

Information About the Operating Instructions

Before using the product for the first time, please read through these operating instructions carefully and keep them for future reference and other users. They form an integral part of the product. The manufacturer and importer do not accept any liability if the information in these operating instructions is not complied with.

SIGNAL WORDS

Signal words indicate hazards if the associated notices are not followed.

WARNING – medium risk, may result in serious injury or death

NOTICE – may result in risk of damage to material

SYMBOLS

 Danger symbol: This symbol indicates possible hazards. Read the associated safety notices carefully and follow them.

 Read the operating instructions before use!

 Suitable for use with food.

ITEMS SUPPLIED

Decorating pen (1 x), Small stick tool (1 x), 1.5V battery, LR44 (2 x), Operating instructions (1 x)

Check the items supplied for completeness and the components for transport damage. If you find any damage, do not use the product but contact our customer service department. Remove any possible films, stickers or transport protection from the product. **Never remove the rating plate and any possible warnings!**

AT A GLANCE

(Picture A + B)

1	Decorating pen	4	Powder opening
2	Cover	5	Small stick tool
3	On / Off button	6	Powder chamber
		7	Battery compartment

INTENDED USE

- This product is intended to be used to decorate food and drinks with powder, e.g. cocoa, cinnamon or other spices.
- The product is designed for personal use only and is not intended for commercial applications.
- Use the product only for the intended purpose and as described in the operating instructions. Any other use is deemed to be improper.

SAFETY NOTICES

WARNING – Danger of Injury

- Keep the packaging material and accessories away from children and animals. There is a danger of suffocation!
- Children must **not** play with the product.
- Batteries can be deadly if swallowed. The battery and the product should therefore be kept out of the reach of very young children and animals. If a battery is swallowed, seek medical assistance immediately. There is a danger of burns from battery acid.
- If a battery has leaked, do not allow your skin, eyes and mucous membranes to come into contact with the battery acid. Wear protective gloves if necessary. If you do touch battery acid, rinse the affected areas with abundant clear water straight away and seek medical assistance immediately. There is a danger of burns from battery acid.

NOTICE – Risk of Damage to Material and Property

- Do not use any sharp or abrasive cleaning agents or cleaning pads to clean the product. These may damage the surfaces. Just clean with a cloth or a soft brush if necessary.
- Use only the battery type specified in the product data.
- Always replace all batteries together. Do not use batteries of different types or brands, or batteries with different capacities.
- Take batteries out of the product when they are dead or if you will not be using the product for a prolonged period. This will prevent any damage caused by leaks.
- Remove batteries which have leaked immediately and clean the contacts in the product.
- Do not lay or place any heavy objects on the product.
- Protect the product from: heat sources, flames, sub-zero temperatures, persistent moisture, wet conditions, direct sunlight and impacts.
- Use only original accessories from the manufacturer in order to guarantee that there is no interference that may prevent the product from working and to avoid possible damage.

INSERTING / REPLACING BATTERIES

NOTICE: The batteries supplied with the product are already inserted in the battery compartment. Before you first use it, pull out the plastic strip located between the decorating pen and the cover.

1. Pull off the cover.
 2. Before inserting them, check whether the contacts in the product and on the batteries are clean, and clean them if necessary.
 3. Insert two 1.5 V batteries (LR44) into the battery compartment. Ensure the correct polarity (+ / -).
 4. Place the cover on and press it on firmly. It must engage.
- Replace the batteries when the power of the product starts to wane.

FILLING THE POWDER CHAMBER

1. Pull off the cover.
2. Pour cocoa, cinnamon or a similar spice into the powder chamber. Do not overfill it!
3. Place the cover on and press it on firmly. It must engage.



USE

Please Note!

- There may still be some production residues on the product. You should therefore thoroughly clean it before you first use it.

- **Decorate food / drinks:** Guide the decorating pen with the powder opening a short distance above the surface that you want to decorate. Press and hold the On / Off button at the same time. While the button is pressed, powder will trickle out of the powder opening (Picture C).
- **Close the powder opening:** Let go of the On / Off button. **NOTICE:** Once you have let go of the button, a small amount of powder may continue to trickle out of the powder opening. This is normal and not a product defect.
- **Release any blockage:** Carefully slide the small stick tool into the powder opening and pull it out again. If necessary, carefully tap the side of the decorating pen or briefly press the On / Off button.
- When the product is not in use, store it in a cool and dry place protected from dust and direct sunlight out of the reach of children and animals.

DISPOSAL




Dispose of the packaging material in an environmentally friendly manner so that it can be recycled.


The adjacent symbol (crossed-out bin underlined) means that used devices should not be disposed of in the domestic waste, but should instead be taken to special collection and return systems. Owners of used devices must remove from the used device any used batteries or rechargeable batteries which are not encapsulated by the used device and can be removed in a non-destructive way and dispose of them separately (see also the section on battery disposal). Owners of used devices from private households can take them free of charge to the collection points of the public waste disposal authorities or the disposal points which are set up by manufacturers and distributors under the Electrical Equipment Act so that they can be disposed of in an environmentally friendly way and valuable raw materials can be recovered. If they are not disposed of properly, toxic ingredients may escape into the environment and cause harm to the health of humans, animals and plants. Businesses which market electrical and electronic devices are also obliged to take back used devices.

TECHNICAL DATA

Article number: 11939
Model number: WR2022121601
Voltage supply: 3 V DC (2 x 1.5 V battery, LR44)
ID of operating instructions: Z 11939 M DS V1 0323 as



All rights reserved.



Non-rechargeable and rechargeable batteries must not be disposed of along with the household waste. Consumers are legally obliged to separate and recycle non-rechargeable and rechargeable batteries. Non-rechargeable and rechargeable batteries can be taken free of charge to a collection point of your local authority/district or in shops so that they can be disposed of in an environmentally friendly way and valuable raw materials can be recovered. If they are not disposed of properly, toxic ingredients may escape into the environment and cause harm to the health of humans, animals and plants. Only dispose of non-rechargeable and rechargeable batteries when they are discharged. If possible, use rechargeable batteries rather than single-use batteries. With non-rechargeable and rechargeable batteries that contain lithium, cover the poles before disposing of them to prevent a short circuit. A short circuit may cause a fire or explosion.

Waste prevention makes an even more valuable contribution to protecting the environment. This means if possible, as well as continuing to use or repair a product yourself, passing it on to another user also represents an ecologically beneficial alternative to disposal.

IMPORTER

DS Produkte GmbH, Stormarnring 14,
22145 Stapelfeld, Germany



Customer Service:
Am Heisterbusch 1, 19258 Gallin, Germany
☎ +49 38851 314650 *)

*) Calls to German landlines are subject to your provider's charges.